

						20A	SPARE FUSE	15A	SPARE FUSE	10A	SPARE FUSE
IGN	FUEL PUMP	IGN	WIPER	IGN	METER	IGN	RR WIPER	BAT	RR DEFOG	BAT	RR DEFOG
15A		20A		10A		10A		15A		15A	
IGN	TURN LAMP	ST	STARTER SIGNAL	IGN	A/T CONTROL	BAT	HAZARD LAMP	BAT	STOP LAMP	BAT	ROOM LAMP
10A		10A		10A		15A		15A		15A	
IGN	FUEL INJECTOR	IGN	HICAS	IGN	MOTOR FAN	ACC	MIRROR	ACC	CIG LIGHTER		
10A		10A		10A		10A		15A			
ACC	AUDIO	IGN	AIR BAG	IGN	ENGINE CONTROL	ACC	BLOWER MOTOR	ACC	BLOWER MOTOR		
10A		10A		10A		15A		15A			
IGN	ELECTRONIC PARTS	IGN	ABS	IGN	AIR COND -TIONER					BAT	ELECTRONIC PARTS
10A		10A		10A						10A	




5 D 8

1. USE SPECIFIC FUSES ONLY.
2. CONTACT A NISSAN DEALER FOR SYSTEMS NOT LISTED.

NISSAN
93F00

S15 FOOTWELL FUSEBOX DIAGRAM

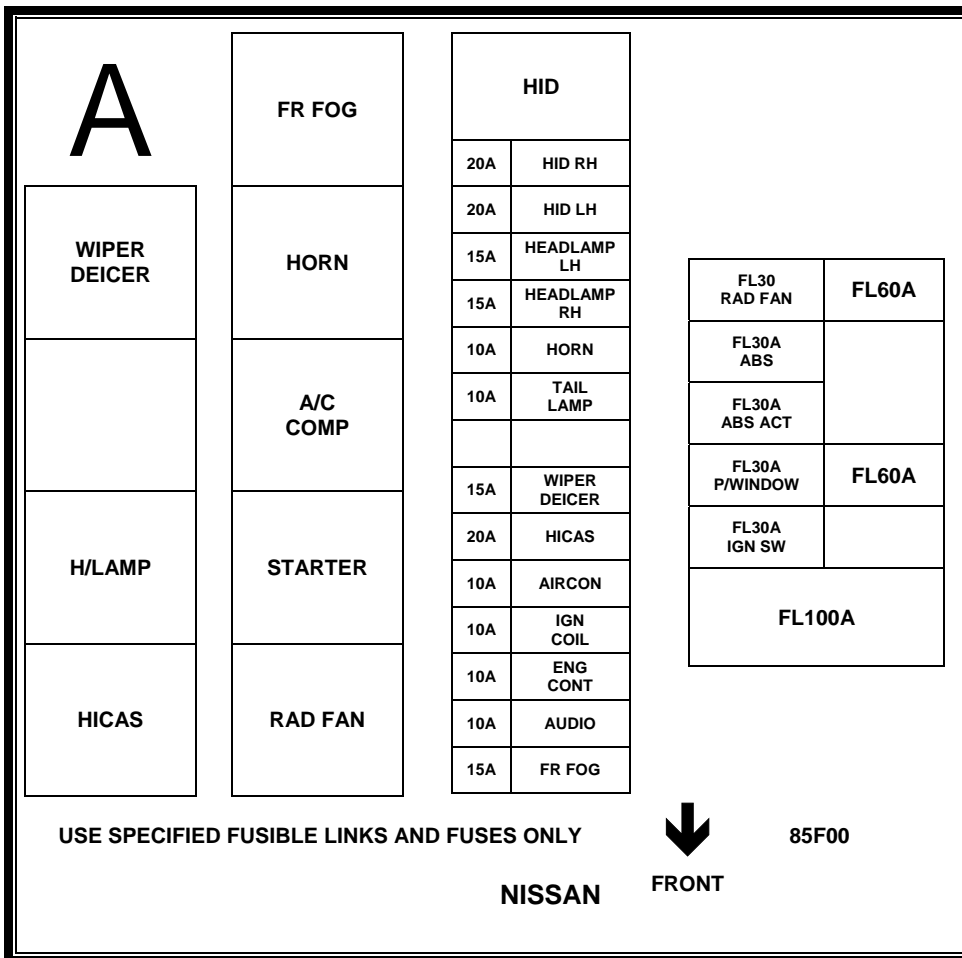

S15 ENGINE BAY FUSE BOX DIAGRAM